



Use and Care Guide

Dryer



Safety instructions3-5



Operating Instructions, Tips

Automatic Drying	7
Automatic Extra Care Feature	6
Controls Setting Guide	8, 9
Cycle Settings	6
Drying Selections Guide	6
End-of-Cycle Signal	7
Energy-Saving Tips.....	5
Knits Drying Tips.....	7, 13
Lint Filter.....	6, 11
Loading	6, 10
Operating the Dryer	6
Permanent Press Drying Tips	7, 13, 14
Sorting Clothes	6, 10
Timed Drying	7



Care and Cleaning

Dryer Exhaust	11
Drum	11
Exterior	11
Lint Filter	11
Storing the Dryer.....	11
User Maintenance Instructions	11



Problem Solver.....12-14

More questions ?...call

GE Answer Center® 800.626.2000



Consumer Services15

Model and Serial Numbers 2 |

Repair Service 2 |

Warranty

Back Cover

Models: DDE7600R DDG7680R



HELP US HELP YOU...

Read this book carefully.

It is intended to help you operate and maintain your new dryer properly.

Keep it handy for answers to your questions.

If you don't understand something or need more help, write (include your phone number)

Consumer Affairs
GE Appliances, Appliance Park
Louisville, KY 40225

Save time and money.

Before you request service . . . check the Problem Solver section. It lists causes of minor operating problems that you can correct yourself.

If you received a damaged dryer...

Immediately contact the dealer (or builder) that sold you the dryer.

Write down the model and serial numbers.

You'll find them on a label on the front of the dryer behind the door.

These numbers are also on the Consumer Product Ownership Registration Card that came with your dryer. Before sending in this card, please write these numbers here:

Model Number

Serial Number

Use these numbers in any correspondence or service calls concerning your dryer.

To obtain a Spanish language version of this book, call GE Answer Center® 800.626.2000 consumer information service.

Para obtener la versión en español de este manual, name a GE Answer Center®, servicio de información para el consumidor, teléfono 800.626.2000.

WARNING: For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or loss of life.

—Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

—WHAT TO DO IF YOU SMELL GAS

. Do not try to light any appliance.

. Do not touch any electrical switch; do not use any phone in your building.

. Clear the room, building or area of all occupants.

. Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.

. If you cannot reach your gas supplier, call the fire department.

—Instigation and service must be performed by a qualified installer, service agency or the gas supplier.

All drying instruction terms in this book conform to the Care Labeling Rule established by the Federal Trade Commission, January 1984.

If you need service

To obtain service, see the Consumer Services page in the back of this book.

We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are three steps to follow for further help.

First, contact the people who serviced your appliance. Explain why you are not pleased. In most cases, this will solve the problem.

NEXT, if you are still not pleased, write all the details—including your phone number—to:

Manager, Consumer Relations
GE Appliances, Appliance Park
Louisville, KY 40225

FINALLY, if your problem is still not resolved, write:

Major Appliance Consumer
Action Panel
20 North Wacker Drive
Chicago, IL 60606

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.



IMPORTANT SAFETY NOTICE

The California Safe Drinking Water and Toxic Enforcement Act requires the governor of California to publish a list of substances known to the state to cause cancer, birth defects or other reproductive harm and requires businesses to warn customers of potential exposure to such substances.

Gas appliances can cause minor exposure to four of these substances, namely benzene, carbon monoxide, formaldehyde and soot, caused primarily by the incomplete combustion of natural gas or LP fuels.

Properly adjusted dryers will minimize incomplete combustion. Exposure to these substances can be minimized further by properly venting the dryers to the outdoors.

A **Warning**—To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Use this appliance only for its intended purpose as described in this Use and Care Book.



- This dryer must be properly installed and located in accordance with the Installation Instructions before it is used. If you did not receive an Installation Instructions sheet with your dryer, you can obtain one by calling, toll free, the GE Answer Center®, 800.626.2000.
- Properly ground to conform with all governing codes and ordinances. Follow details in Installation Instructions.
- Locate where the temperature is above **50°F. (10°C.)** for satisfactory operation of the dryer control system. Do not install or store the dryer where it **will** be exposed to the weather.
- Connect to a properly rated, protected and sized power supply circuit to avoid electrical overload.
- Exhausting to the outside is **STRONGLY RECOMMENDED** to prevent large amounts of moisture and lint from being blown into the room. Carefully follow the Exhausting Details in the Installation Instructions.



- Do not repair or replace any part of the appliance or attempt any servicing **unless specifically recommended in this Use and Care Book or in published user-repair instructions that you understand and have the skills to carry out.**



- When disconnecting this appliance **pull by the plug** rather than **the cord** to avoid damage to the cord or junction of cord and plug. Make sure that the cord is located so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.

To Minimize the Possibility of a Fire Hazard

- **Exhaust Duct**—See Installation Instructions. Use only rigid metal or flexible metal 4" diameter ductwork inside the dryer cabinet or for exhausting to the outside. USE OF PLASTIC OR OTHER COMBUSTIBLE DUCTWORK CAN CAUSE A FIRE. FOIL OR OTHER EASILY PUNCTURED DUCTWORK CAN CAUSE A FIRE IF IT COLLAPSES OR BECOMES OTHERWISE RESTRICTED IN USE OR DURING INSTALLATION.
- Do not use heat to dry articles containing rubber, plastic, or similar materials (such as padded bras, tennis shoes, galoshes, bath mats, rugs, bibs, baby pants, plastic bags, etc.) as these materials may melt or burn. Also, some rubber materials, when heated, can under certain circumstances produce fire by spontaneous combustion.
- Do not store items that may burn or melt (such as clothing, paper material, plastics or plastic containers, etc.) on top of the dryer during the operation.

(continued next page)



IMPORTANT SAFETY INSTRUCTIONS

(continued)

- Garments labeled “Dry Away from Heat” (such as life jackets containing Kapok) must not be put in your dryer.



- Do not wash or **dry articles that** have been cleaned in, washed in, soaked in, **or spotted** with combustible or explosive substances (such as wax, paint, gasoline, **degreasers**, dry-cleaning solvents, kerosene, etc.) which may ignite or explode. Do not add these substances to the wash water. Do not use these substances around your washer **and/or** dryer during operation.
- Any article on which you have used a cleaning solvent, or which contains flammable materials (such as cleaning cloths, mops, towels used in beauty salons, restaurants or barber shops, etc.) must not be placed in or near the dryer until all traces of these flammable liquids or solids and their fumes have been removed. There are many highly flammable items used in homes such as: acetone, denatured alcohol, gasoline, kerosene, some household cleaners, some spot removers, turpentine, waxes, wax removers and products containing petroleum distillates.



- Clean the lint filter before each load to prevent lint accumulation inside the dryer or in the room. **DO NOT OPERATE THE DRYER WITHOUT THE LINT FILTER IN PLACE.**
- Keep the area around and underneath your appliances free from the accumulation of combustible materials, such as lint, paper, rag, chemicals, etc.
- The interior of the machine and the exhaust duct connection inside the dryer **should** be cleaned periodically by a qualified individual.

To Minimize the Possibility of Injury

- **Never reach into the dryer while the drum is moving.** Before loading, unloading or adding clothes, wait until the drum has completely stopped.
- Do not **dry fiberglass articles in your dryer.** Skin irritation could result from the remaining glass particles that may be picked up by clothing during subsequent dryer uses.



- The laundry process can reduce the flame **retardancy** of fabrics. To avoid such a result, the garment manufacturer's care instructions should be followed very carefully.



- **Close supervision is necessary if this appliance is used by or near children.** Do not **allow** children to play inside, on, or with this appliance or **any** discarded appliance. Dispose of **discarded** appliances and shipping or packing materials properly. Before discarding a dryer, or removing from service, remove the door of the dryer compartment.



- Keep **all** laundry aids (such as detergents, bleaches, fabric softeners, etc.) out of the reach of children, preferably in a locked cabinet. Observe all warnings on container labels to avoid personal injury.
- Keep the floor around your appliances clean and dry to reduce the possibility of slipping.



- To minimize the possibility of electric shock, unplug this appliances from the power supply before attempting any maintenance or cleaning (except the removal and cleaning of the lint filter).



- NOTE: Turning the Cycle Selector knob to an OFF position does NOT disconnect the appliance from the power supply.

- Do not tamper with the controls.



- Do not operate this appliance if it is **damaged**, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.

- **Never climb on or stand on the dryer top.**

- If yours is a gas dryer, it is equipped with an automatic electric ignition and does not have a pilot light. **DO NOT ATTEMPT TO LIGHT WITH A MATCH.** Burns may result from having your hand in the vicinity of the burner when the automatic ignition may turn on.

Dryer-applied Fabric Softeners or Anti-static Conditioners

You may wish to soften your laundered fabrics or reduce the static electricity in them. We recommend you use either a fabric softener in the wash cycle, according to the manufacturer's instructions for those products, or try a dryer-added product for which the manufacturer gives written assurance on the package that their product can be safely used in your dryer.

Service or performance problems caused by the use of these products are the responsibility of the manufacturers of those products and are not covered under the warranty of this appliance.

SAVE THESE INSTRUCTIONS

ENERGY-SAVING TIPS




- Sort clothes by weight so you won't have to run an extra cycle for one or two heavier, slower-drying items.
- Do not overload your dryer. For efficient drying, clothes need to tumble freely.
- Use Automatic Drying cycles whenever possible to prevent overdrying and to save energy.
- To help prevent ironing, use Knits/Delicates Low Heat. Remove garments promptly at end of drying cycle and place on hangers.
- Dry your clothes in consecutive loads. Using a "warm" dryer will save energy.
- Clean the dryer lint filter each time you dry.
- Clean the dryer exhaust ducting at least once a year. A partially clogged exhaust can lengthen drying time.



HOW TO OPERATE YOUR DRYER

WARNING To reduce the risk of fire, electric shock, or injury to persons when using your appliance, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating this appliance.

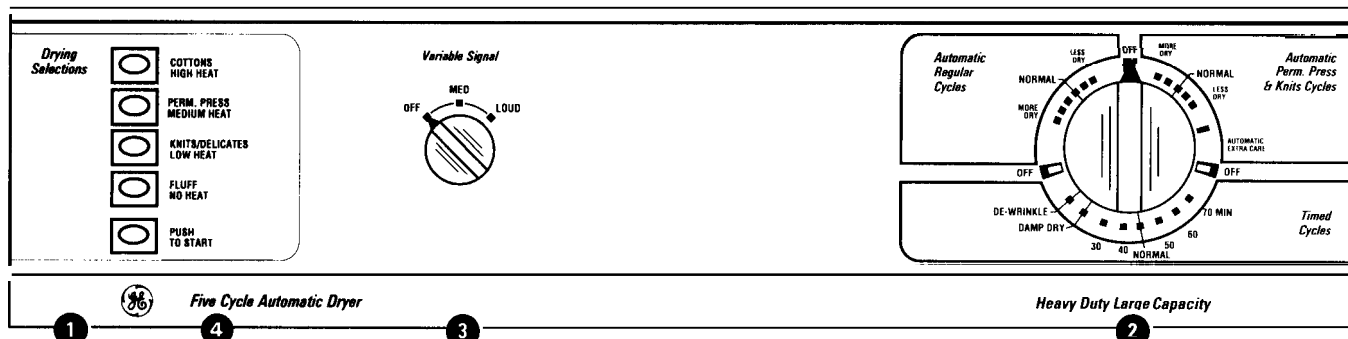

Check the Lint Filter

Clean the lint filter each time the dryer is used. Always be sure the lint filter is in place. Don't use the dryer without it. See Care and Cleaning section.

Sort and Load the Clothes

Good sorting for the dryer begins at the washer. Generally, if clothes are sorted right for washing, they're sorted right for drying. See the How to Sort the Clothes section. If you do mix various types of fabrics in your load, set the controls for the lighter-weight fabrics and remove when dry. Reset controls for the remaining heavier fabrics.

Set the Controls

See the Controls Setting Guide.

1 Drying Selections.

Push a button to select the proper heat for your load.

	Should be used with cycles indicated .		
Drying Selections	Automatic Regular cycle	Automatic Perm. Press and Knits Cycles	Timed Cycles
Cottons High Heat	•		•
Perm. Press Medium Heat		•	•
Knits/Delicates Low Heat		•	•
Fluff No Heat			•

2 Cycle Selector.

Turn the Cycle Selector to the desired cycle setting. The selector may be turned in either direction.

3 End-of Cycle Signal.

Set this signal, if desired to remind you to remove clothes from the dryer when cycle ends. See the End-of Cycle Signal section at right.

4 Start Button.

Press the Push to Start button to start the dryer. (Opening the door during operation stops the dryer. To restart, close the door and press the Push to Start button.)




End-of-Cycle Signal

(Operates with any cycle.)

The signal control can be set anywhere between OFF and LOUD, depending on the desired sound level. The signal will sound just before the end of the cycle to remind you to remove the clothes.

To stop the signal while sounding, turn the signal control to OFF or advance the Cycle Selector to OFF.

The signal should always be used when drying polyester knits or permanent press items which should be removed as soon as the dryer stops to help prevent setting of wrinkles.

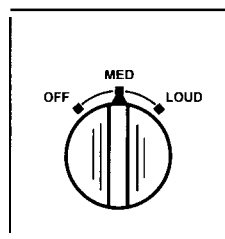

Polyester Knits & Permanent Press Drying Tips

•DO NOT OVERLOAD—

Garments being dried or dewrinkled should tumble freely.

•REMOVE CLOTHES

PROMPTLY—To help prevent wrinkling, remove clothes from the dryer promptly at the end of the drying cycles.

•PLACE ON HANGERS—

Permanent press and polyester knit garments look best if placed on hangers after drying.

The Difference Between Automatic and Timed Drying

Automatic Drying


When using the Automatic cycles, the *Automatic Dry Control system* continually senses the temperature of the air in the dryer drum. Wet laundry keeps the air cool. When laundry is dry enough (and the drum air warm enough) the heat turns off. When the air cools, the heat turns back on. This off and on cycling may happen a number of times (depending on the fabric, load size and Cycle Selector setting). The Cycle Selector advances (when the heat is off) until it automatically turns off dryer.

Timed Drying

When using the Timed Cycles, you select the number of minutes you wish the dryer to run and it turns off at the end of this time period.


Drying Selections Guide for the Automatic Cycles

Set to NORMAL Position

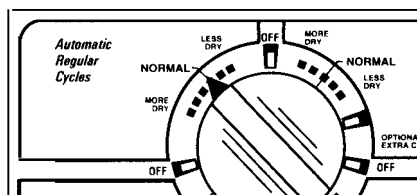


- For most normal loads.

Set toward More Dry

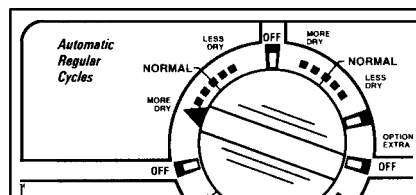

- For loads that include heavy-weight fabrics.
- If you desire to remove more moisture.

Set toward Less Dry

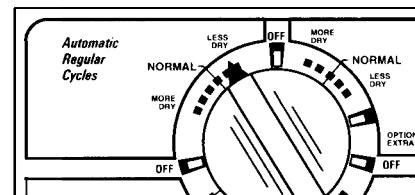

- For light weight fabric loads.
- If you desire to remove less moisture.
- For very small loads.



CONTROLS SETTING GUIDE

For Different Fabrics and Loads

Load	Drying Selection*	Cycle	Cycle Setting
Cottons & Linens	Cottons High Heat	Automatic Regular Cycle or Timed Cycle	See the Drying Selections Guide. Set at Normal for dry; at Damp-Dry for Ironing.
Permanent Press, Treated Cottons, Blends with Cotton	Perm. Press Medium Heat	Automatic Perm Press and Knits Cycle Timed Cycle	See the Drying Selections Guide. De-Wrinkle setting to De-Wrinkle garments that have not been washed.
Synthetics—Polyester, Nylon, Acrylic Knits and Woven Fabrics Sturdy Delicate	Perm. Press Medium Heat Knits/Delicates Low Heat	Automatic Perm Press and Knits Cycle	See the Drying Selections Guide.
Silks and Wools, Blends including Silks and Wools	Knits/Delicates Low Heat	Automatic Perm. Press and Knits Cycle	Set toward Less Dry. See the Drying Selections Guide.
Rayon and Acetate	Knits/Delicates Low Heat	Automatic Perm. Press and Knits Cycle	Set toward Less Dry. See the Drying Selections Guide.
Down-filled garments, if machine washing and drying are recommended.	Cottons High Heat	Automatic Regular Cycle	
Baby Clothes—Sturdy: Diapers, Nightgowns, Shirts, Pads, Sheets, Receiving Blankets, Coveralls. See Special Instructions.	Cottons High Heat	Automatic Regular Cycle	
Baby Clothes—Delicate	Knits/Delicates Low Heat	Automatic Perm. Press and Knits Cycle	Set toward Less Dry.
Blankets—Wool, Part Wool, Cotton, Electric, Synthetic. See below under “Extra-large Items.”	Cottons High Heat	Timed Cycle	Set at 20 to 25 minutes
Curtains, Slipcovers, Draperies DO NOT MACHINE DRY FIBERGLASS.	Cottons High Heat	Timed Cycle	For first setting, set at 20 minutes;. for second setting, set at 15 minutes.
Chenille Bedspreads, Robes. See below under “Extra-large Items.”	Cottons High Heat	Timed Cycle	First setting—20 minutes; additional settings—5 minutes.
Rubber-coated Items, Laminated Fabrics, Vinyl, Plastics and Articles with Plastic Trim.	Fluff No Heat	Timed Cycle	Set for time desired.
Bathmats and Rugs	Cottons High Heat	Timed Cycle	First setting—20 minutes; additional settings—5 minutes.
Extra-large Items—Queen or King Size Sheets, Blankets or Spreads, Sleeping Bags, Insulated Jackets or Suits, Mattress Covers (Pads), Quilted Bedspreads.	Permanent Press Medium Heat	Timed Cycle	First setting—20 minutes; second setting—15 minutes; additional settings—5 minutes.
Pillows—Feather and Polyester- filled (if manufacturer recommends they be dried in a dryer). See the Special Instructions.	Cottons High Heat	Timed Cycle	Set at 70 minutes.

*The terms High, Medium and Low Heat are those usually found on fabric care labels. For best results, follow your fabric care labels.

NOTE: The Cycle Selector settings indicated above are to be used as a guide.

You may find that best results are obtained by setting the Cycle Selector to either side of the recommended settings.



Special Instructions

Do not dry non-colorfast items with whites or light-colored items.

Do not overload dryer; clothes should tumble freely. Remove promptly as soon as dryer stops; place clothes on hangers to minimize wrinkling.

Do not overload dryer; clothes should tumble freely. Remove promptly as soon as dryer stops, place clothes on bangers to minimize wrinkling.

Dry silks and wools in your dryer only if recommended by the garment manufacturer. Follow instructions carefully.

Tumble drying is mandatory. Down must be thoroughly dried to remove odor and prevent mildewing. Place two large, dry towels in the dryer to improve tumbling and shorten drying time. Be sure to dry thoroughly.

IMPORTANT. If children's sleepwear is made of Modacrylic, tumble dry only on Low/Knits temperature. Normal Heat can damage these fabrics. Check manufacturer's drying instructions.

See above instructions.

Place in dryer with 3 or 4 dry towels which have been heated for 5 minutes, Set timer for 20 to 25 minutes. Do not set control for more than 25 minutes. Do only one blanket at a time. Remove blanket at end of cycle and block blanket back to original shape. Press binding with warm iron. Allow to dry before storing.

Use dry towels as buffers. Set timer for 20 minutes. If items are still wet, reset for 15 minutes and check again. Items **should** be removed while still damp. Place slipcovers on furniture immediately, Hang draperies and curtains so that creases will fall out. Stop dryer periodically and check filter for excess lint. Remove and restart dryer.

Tumble dry on Fluff (No Heat) setting as heat may cause alteration in shape, color and appearance of such articles.

Stop dryer periodically and check filter for excess lint. Remove and restart dryer,

Special precautions must be taken to dry extra-large items. Set dryer for *20 minutes then check carefully*. Set 15 minutes for second setting, check again; and 5 minutes for each additional setting. Make sure that article does not fill drum. Many large articles, when wet, have ample room in dryer, but as they dry and fluff up may not have room to tumble, Check carefully every few minutes and if article is still wet or damp and fills dryer, finish drying on line. Do not, under any circumstances operate dryer for longer times without checking. CAUTION: If large items do not have room to tumble, the air flow may be blocked which could result in scorching your valuable items. Many large items, like shag rugs, cannot be dried in home size dryers. **DO NOT tumble dry; jackets containing Kapok.** (See filter cleaning instructions above).

Check ticking for holes or weak seams where feathers or filling **could** escape. Dry no more than one pillow at a time and set dryer for maximum time. Stop dryer occasionally and shake pillows to redistribute filling for more even drying. Check pillows at end of drying time. If they are not completely dry, return them to dryer and reset for more drying time. Feather pillows dry very slowly and must be dried completely to prevent mildewing. **DO NOT tumble dry pillows containing Kapok.**

Refer to Garment Manufacturers' Care Labels


For more information on care labeling, send for "What's New About CARE LABELS."
For sale by the Superintendent of Documents, U.S. Government Printing Office, Washington, D.C. 20402.



HOW TO SORT CLOTHES

Sort by Surface Texture

Separate

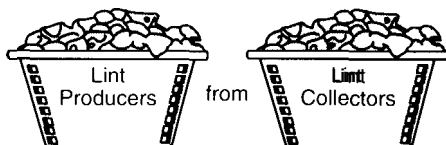


LINT PRODUCERS—such as terry toweling and chenille—give up lint.

LINT COLLECTORS—such as man-made fibers and napped fabrics like velveteen and corduroy—attract lint. These must be dried separately.

Sort by Fabric


Separate

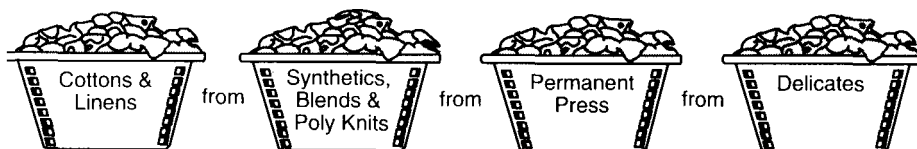

In addition to sorting to reduce lint collection, we recommend that you wash fabrics of similar construction together whenever possible.


Sort by Color

Separate

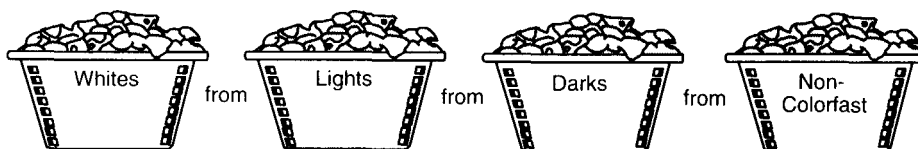

Sort by Weight


Separate

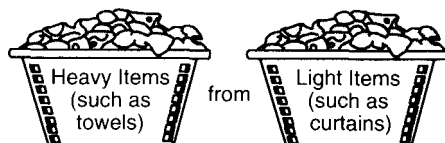


For information on tumble drying extra large items and different fabrics and loads, see the Controls Setting Guide.

HOW TO LOAD THE CLOTHES

Don't overload your dryer. Crowded loads don't dry efficiently and clothes may be unnecessarily wrinkled. Loads should look like this:

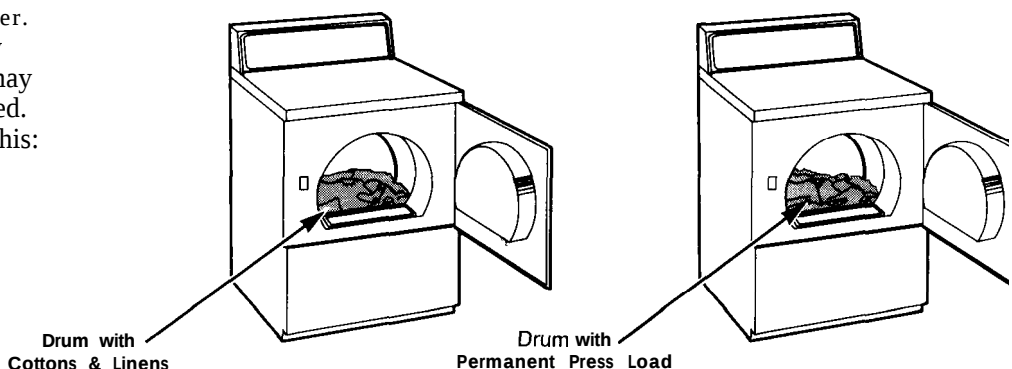

CARE AND CLEANING

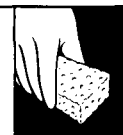

User Maintenance Instructions

CAUTION: If yours is an electric dryer, before you have it connected in your new residence, be sure your licensed electrician confirms that the supply voltage matches the voltage specified on the rating plate.

Dryer Exterior

Wipe off any spills or washing compounds. Wipe or dust with a damp cloth. Try not to strike the surface with sharp objects.

Dryer control panel and finishes may be damaged by some laundry pre-treatment soil and stain remover products if such products are sprayed on or have direct contact with the dryer.

Apply these pre-treatment products away from the dryer. The fabric may then be washed and dried normally. Damage to your dryer caused by pre-treatment products is not covered by your warranty.

Dryer Drum

The porcelain enamel drum is rust-resistant and requires no special care.

Dryer Exhaust


Inspect and clean the dryer exhaust ducting at least once a year.

Dryer Storage


To store your dryer for a short period of time, disconnect the power supply and clean the lint filter.

Lint Filter

Before every dryer use, clean the lint filter. Put your moistened fingers at the corner of the filter and wipe in a downward motion all the way across to the other corner.

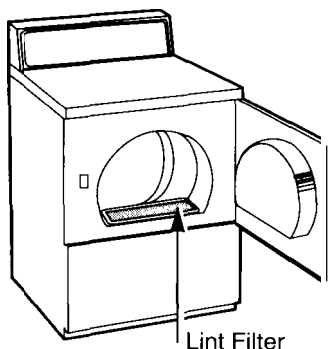

Periodically, remove the lint filter and insert the suction hose from your vacuum cleaner into the opening.

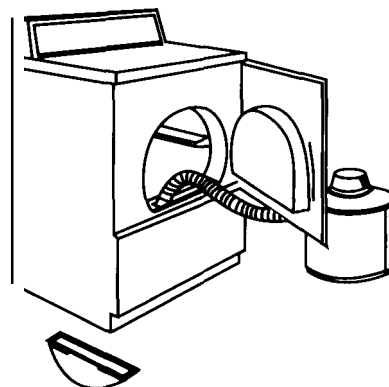

Air Circulation


Do not obstruct the flow of combustion and ventilating air.



QUESTIONS?

USE THIS PROBLEM SOLVER

PROBLEM	POSSIBLE CAUSE
DRYER WON'T START	• Dryer unplugged. Make sure power cord is plugged in. • No power to dryer. Check fuses and circuit breakers to make sure dryer is getting current. Most electric dryers use two. • Controls improperly set. Make sure controls are set and the Start button is pressed. Opening the door during operation stops the dryer. To restart, close the door and press the Push to Start button. • Dryer door is open. Close door securely—dryer will not run with door open. • Circuit is overloaded. Do not operate other appliances on the same electrical outlet or circuit while the dryer is operating.
CLOTHES TAKE TOO LONG TO DRY	• Controls improperly set. Check all controls to make sure they are correctly set for the load you want to dry. See the How to Operate Your Dryer section. • Clogged lint filter. Remove and clean filter before every load. Periodically clean area under lint filter with vacuum cleaner. See the Care and Cleaning section. • Improper ducting. Make sure dryer is ducted in accordance with the Installation Instructions. • Obstruction in exhaust ducting. Make sure ducting is clean and free of obstruction; make sure damper in outside wall cap operates easily. If flexible ducting is used, be sure it is not kinked and is properly installed according to the Installation Instructions. • Blown fuses or tripped circuit breakers. Check household fuses or circuit breakers. Most electric dryers use two. It is possible for one to be blown or tripped and the dryer still tumble without heat. • Improper sorting. Do not mix heavy, hard-to-dry items with lightweight articles. • Large loads of moisture-holding fabrics, such as beach towels, take a long time to remove moisture. • Too many items in dryer. Dry only one washer load at a time. Do not combine loads. • Too few items in dryer. If drying only one article, add two more similar articles, even if dry, to insure proper tumbling.
SHRINKAGE, GENERAL	• Some fabrics will shrink whether machine washed and tumble dried or washed by hand and drip dried; others may be safely washed but will shrink in a dryer. Follow Garment Manufacturers' Care Labels exactly. If in doubt, do not machine wash or tumble dry.

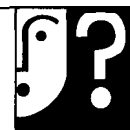

PROBLEM	POSSIBLE CAUSE
SHRINKAGE, KNITS	• Relaxation shrinkage can occur in knit fabrics that have been improperly stretched and elongated by the manufacturer. When this occurs, garment may be pressed back into shape after each wash and dry cycle. • Progressive or delayed shrinkage is caused when starch or sizing (in some fabrics) is gradually removed by laundering. Maybe noticed in older garments that have been laundered many times without previous shrinkage. Treat as for Relaxation Shrinkage above. • Shrinkage caused by overheating occurs in certain knit fabrics that have been heat-shaped. When washing, drying or ironing temperatures exceed the temperatures used to shape set, shrinkage may occur. This cannot be corrected, but it can be prevented by washing in cold or warm water; drying on low heat.
WRINKLING IN PERMANENT PRESS AND “NO-IRON” ITEMS	• Leaving clothes in dryer after tumbling stops. Remove clothes promptly and hang them immediately. • Too many items in dryer. Dry only one washer load at a time. Do not combine loads. • Too few items in dryer. If drying only one article, add two or more similar articles, even if dry, to insure proper tumbling. • Improper loads. Avoid laundering heavy Permanent Press items, such as work clothes, with lighter Permanent Press items, such as shirts or blouses. do not wash or dry Permanent Press with regular laundry. • Too many clothes in washer. Items must have room to move freely. Permanent Press loads should always be smaller than regular loads . . . no more than medium loads. • Use of incorrect wash and dry cycles. Use Permanent Press wash cycle which provides a cool-down rinse to minimize wrinkling. Also, use Permanent Press (Medium) drying cycle. • Incorrect water level. Use large water level for medium load; medium level or half full for small load. • Washing repeatedly in too hot water. Wash in cool or warm water with plenty of detergent. • Accumulation of lime scale due to use of carbonate detergents. If you must use a non-phosphate detergent, avoid the use of a high-carbonate detergent. • Failure to use fabric softener. Proper use of fabric softener will minimize wrinkling.

(continued next page)



THE PROBLEM SOLVER


(continued)

PROBLEM	POSSIBLE CAUSE
WRINKLING IN PERMANENT PRESS AND “NO-IRON ITEMS” (continued)	TO REMOVE WRINKLES: • Retumble on Permanent Press setting, • Rinse and dry on Permanent Press setting. • If unsuccessful, retumble on normal temperature for 10–12 minutes and hang immediately. • Iron carefully. • Send to Dry Cleaners for pressing. • Some wrinkles may remain which cannot be removed. * * NOTE: If you follow good laundry procedures and Permanent Press clothes still come out wrinkled, the finish may not be good quality. Also, in permanent press synthetic/cotton blends, the cotton portion of the fabric can eventually wear away leaving only the synthetic. Since its the cotton portion which is treated for Permanent Press, a loss or decrease of Permanent Press performance will result.

If you need more help... call, toll free:
GE Answer Center™
800.626.2000
consumer information service

We'll Be There

With the purchase of your new GE appliance, receive the assurance that if you ever need information or assistance from GE, we'll be" there. All you have to do is cdl—toll-free!

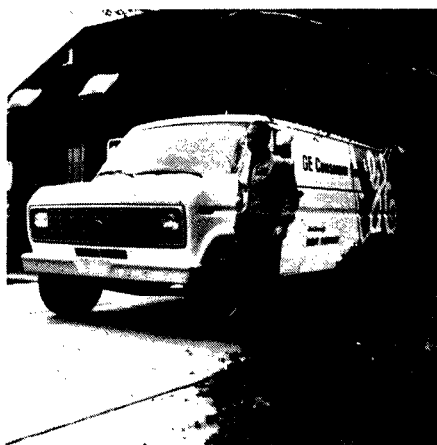

In-Home Repair Service

**800-GE-CARES
(800-432-2737)**

AGE Consumer Service professional will provide expert repair service, scheduled at a time that's convenient for you. Many GE Consumer Service company-operated locations offer you service today or tomorrow, or at your convenience (7:00 a.m. to 7:00 p.m. weekdays, 9:00 a.m. to 2:00 p.m. Saturdays). Our factory-trained technicians know your appliance inside and out—so most repairs can be handled in just one visit.



Service Contracts

800-626-2224

You can have the secure feeling that GE Consumer Service will still be there after your warranty expires. Purchase a GE contract while your warranty is still in effect and you'll receive a substantial discount. With a multiple-year contract, you're assured of future service at today's prices.

Parts and Accessories

800-626-2002

Individuals qualified to service their own appliances can have needed parts or accessories sent directly to their home. The GE parts system provides access to over 47,000 parts... and all GE Genuine Renewal Parts are fully warranted. VISA, Mastercard and Discover cards are accepted.


User maintenance instructions contained in this booklet cover procedures intended to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.





GE Answer Center®

880.626.2000

Whatever your question about any GE major appliance, GE Answer Center® information service is available to help. Your call—and your question—will be answered promptly and courteously. And you can call any time. GE Answer Center® service is open 24 hours a day, 7 days a week.

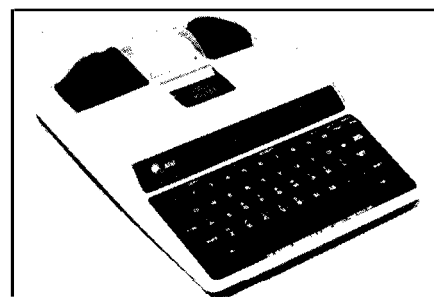

telecommunication Device for the Deaf

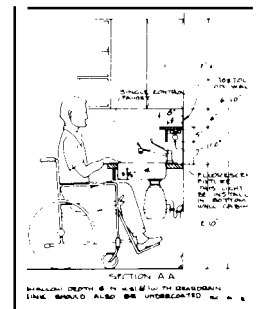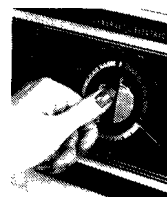

For Customers With Special Needs...

800-626.2000

Upon request, GE will provide Braille controls for a variety of GE appliances and a brochure to assist in planning a barrier-free kitchen for persons with limited mobility. To obtain these items free of charge, call 800.626.2000.

Consumers with impaired hearing or speech who have access to a TDD or a conventional teletypewriter may call 800-TDD-GEAC (800-833-4322) to request information or service.

YOUR GE AUTOMATIC CLOTHES DRYER WARRANTY

Save proof of original purchase date such as your sales slip or cancelled check to establish warranty period.

WHAT IS COVERED

FULL ONE-YEAR WARRANTY

For one year from date of original purchase, we will provide, free of charge, parts and service labor in your home to repair or replace **any part of the dryer** that fails because of a manufacturing defect.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for ordinary home use in the 48 mainland states, Hawaii and Washington, D.C. In Alaska the warranty is the same except that it is LIMITED because you must pay to ship the product to the service shop or for the service technician's travel costs to your home.

All warranty service will be provided by our Factory Service Centers or by our authorized Customer Care® servicers during normal working hours.

Should your appliance need service, during warranty period or beyond, call 800-GE-CARES (800-432-2737).

WHAT IS NOT COVERED

- Service trips to your home to teach you how to use the product.

Read your Use and Care material.

If you then have any questions about operating the product, please contact your dealer or our Consumer Affairs office at the address below, or call, toll free:

GE Answer Center®
800.626.2000
consumer information service

- Improper installation.

If you have an installation problem, contact your dealer or installer. You are responsible for providing adequate electrical, exhausting and other connecting facilities.

- Replacement of house fuses or resetting of circuit breakers.
- Failure of the product if it is used for other than its intended purpose or used commercially.
- Damage to product caused by accident, fire, floods or acts of God.

WARRANTOR IS NOT RESPONSIBLE FOR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

Warrantor: General Electric Company

**If further help is needed concerning this warranty, write:
Manager—Consumer Affairs, GE Appliances, Louisville, KY 40225**

This book is printed on recycled paper.

Part No. 113 D5497P225
Pub No. 49-9705

6-92 CG

DDE7600R
DDG7680R